



## Engine harness plug

pin No	cable size mm	function		notes
1	1	12v ignition supply (switch)	red	
2	1	ECU ignition relay supply	black	
3	0.5	main relay control (coil, Injection, Lambda)	pink	emerald switches this to earth
4	0.5	cooling fan relay drive	orange	emerald switches this to earth
5	0.5	fuel pump relay driver	green	emerald switches this to earth
6	0.5	tachometer output signal	mauve	
7	0.5	shift light driver	grey	
8	0.5	oil pressure gauge	white	
9	0.5	oil pressure warning lamp	yellow	
10	0.5	water temp gauge	mauve	
11	0.5	alternator warning lamp	red	horizontal terminal on alternator
12	1	fuel pump +	grey	supply for high pressure fuel pump, rear pump has feed in the loom.

Please note this is only a guide, we reserve the right to change any contents and prices at any time without notification.